


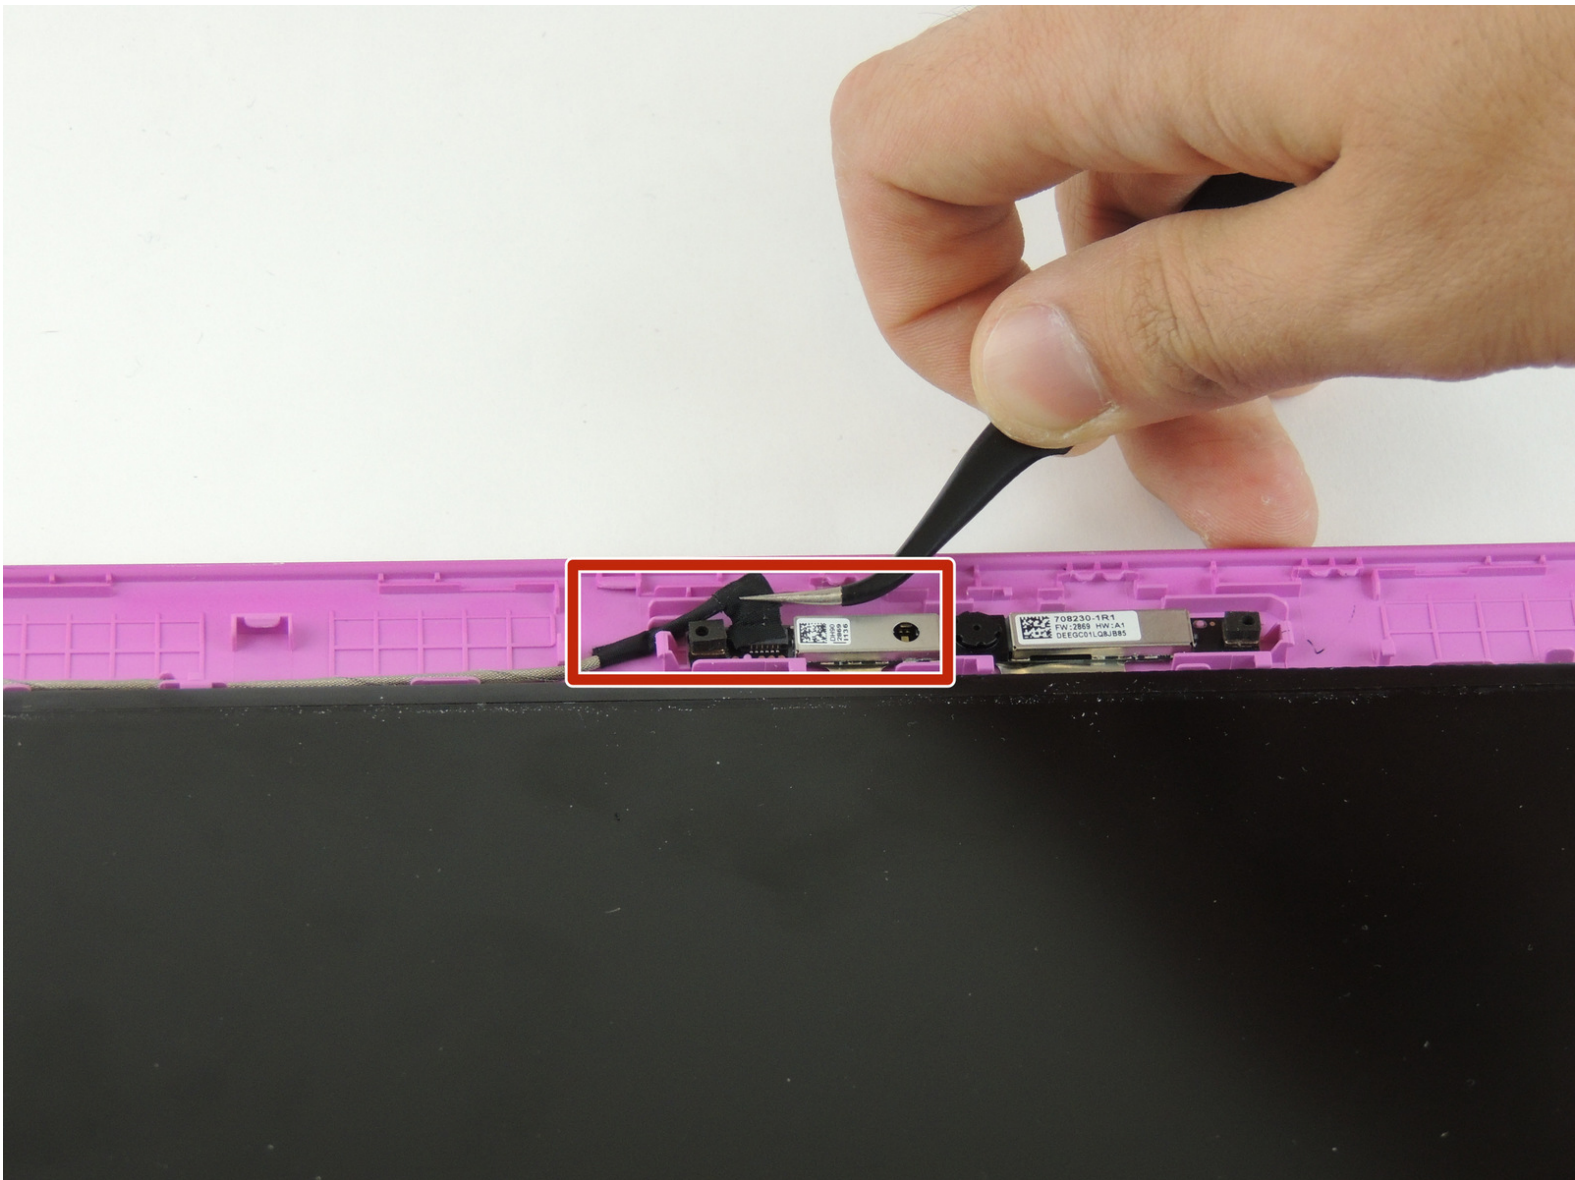

HP Stream 11-d020nr Webcam Replacement

Replace a faulty or damaged webcam in an HP Stream 11 laptop.

Written By: Spenser Mason



INTRODUCTION


This guide will walk you through the process of replacing a faulty or damaged webcam in an HP Stream 11 laptop. This should take you about 10-15 minutes.



TOOLS:

- [Spudger](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Metal Spudger Set](#) (1)
 - [Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Lower Case

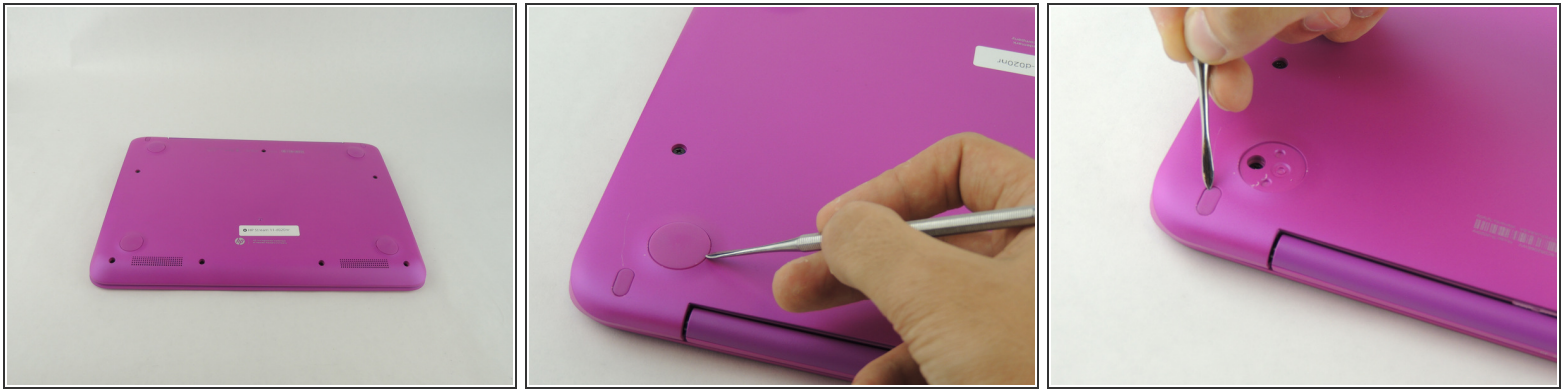

i Before disassembly, unplug and power off the Stream 11.

- Turn the laptop over to access the lower case.
- Using a metal spudger, remove the two small elliptical screw covers and the two large circular screw covers closest to the screen.

Step 2



- Remove the eleven 5.6 mm Phillips #00 screws.

Step 3



- Turn the computer upright and lift the screen.
- Carefully use the metal spudger to pry the plastic keyboard cover from the base.
 - ⚠ When using the metal spudger, be careful not to press into the components underneath the keyboard cover. If possible, use a standard spudger or plastic opening tool to remove the keyboard cover.
- Work the spudger around the cover to release the clips attaching the cover to the base.
- ⓘ Be patient when removing the cover, as there are many clips and it may take some time.

Step 4



- Using tweezers, unplug the cable connecting the ClickPad to the base.
- Remove the plastic keyboard cover.




⚠ The cover is attached to the ClickPad by a cable. Be careful not to lift the cover too far so you do not damage this cable.

Step 5 — Keyboard





- Tilt the top of the keyboard plate up until you separate it from the base.
- Continue to lift the keyboard toward you slowly.

Step 6

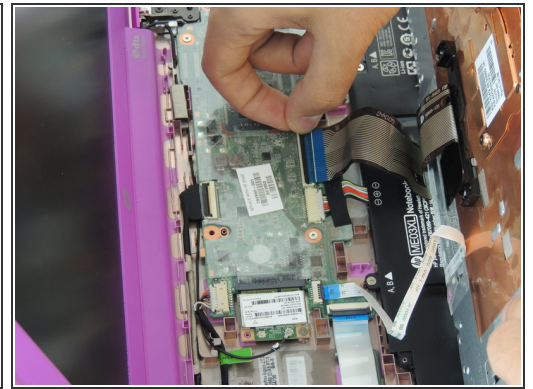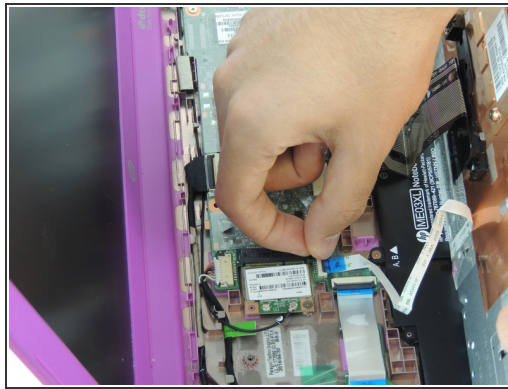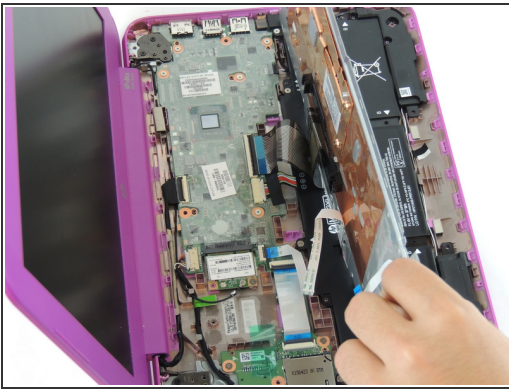


- Lift up the retaining flaps on the ZIF connectors securing the two keyboard ribbon cables.
- After disengaging the connectors, gently unplug both ribbon cables.

Step 7 — Lid

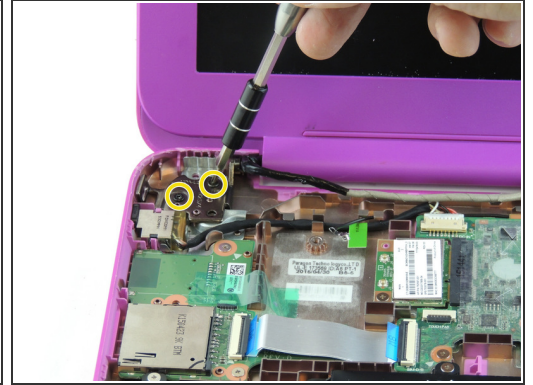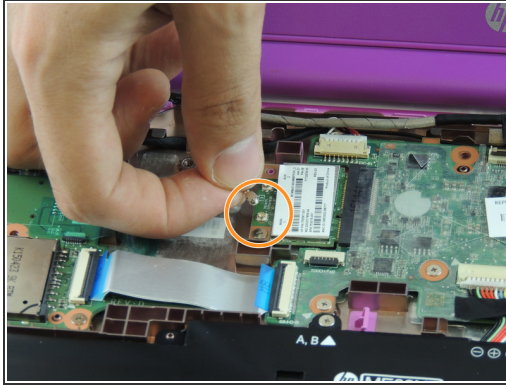


- Lift the black flap on the display cable ZIF connector.
- After lifting the flap, gently pull the display cable from its socket.
- Disconnect the wireless antenna from the wireless card.
- Remove the four 2.2 mm Phillips #00 screws on the left and right sides of the laptop.

Step 8

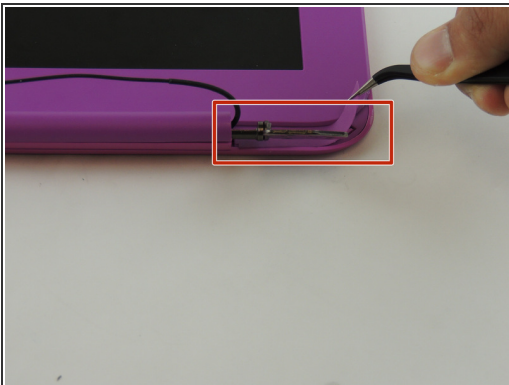


- Use tweezers to remove the screw covers from the lid.
- Remove the two 2.2 mm Phillips #000 screws.
- Use a plastic opening tool to disengage the front part of the lid.

Step 9 — Webcam

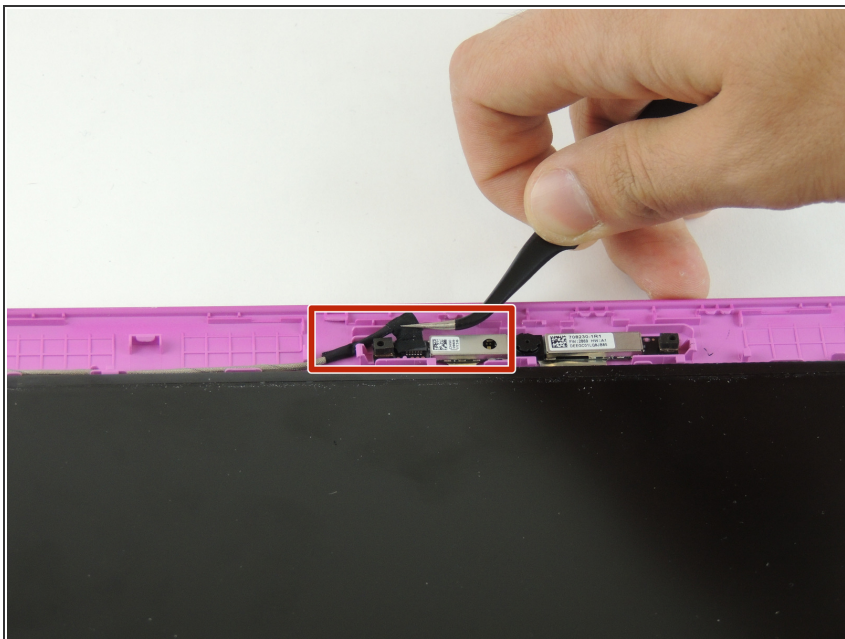

- Use the tweezers to remove the wire connected to the webcam.

Step 10

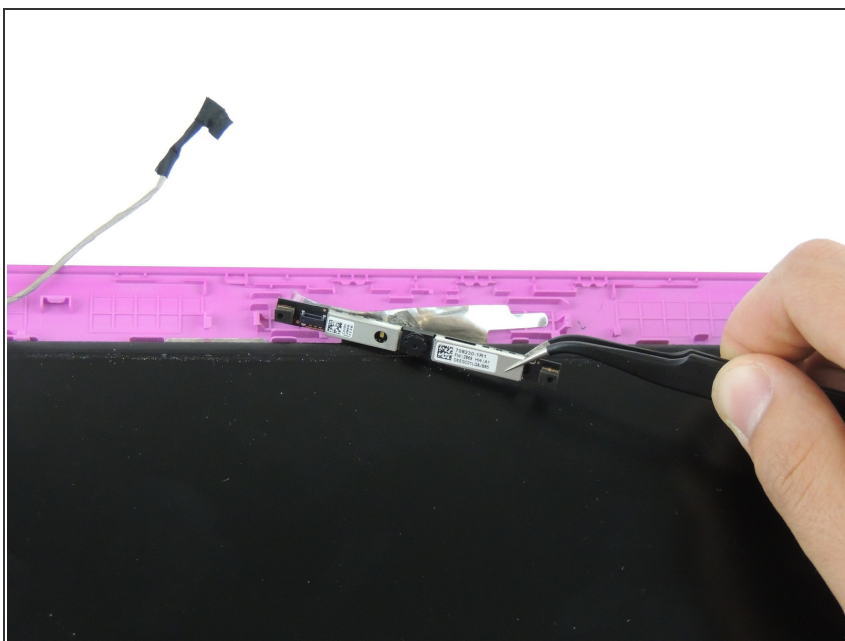

- Use the tweezers to pull the webcam off of the frame.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 03:48:17 AM.